



The following steps are simple and easy. They are also very beneficial to the overall appearance and durability of your fine Bosquet products. Please ensure that these guidelines are properly followed, and done in due time, at least once a year.

- First, remove surface dirt. Inspect the exterior of your wood windows and doors for failing caulk or cracked, peeled or bubbled paint, which can cause the naked wood to be exposed to the elements, and damage it.
- To remove superficial surface dirt from painted wood exteriors, wash with water and a microfibre cloth (such as those used for washing cars). The cloth can be damp, but not wet, as this could damage the wood. A soft brush works well to remove any build-up in cracks and crevasses.
- For heavier accumulations, use an approved cleaning solution such as a mild dish detergent. Do not apply directly to the wood, but rather on a microfibre cloth.
- Rinse off detergent solutions or cleaners with clean water, as these products can damage the finish if they are not removed.
- Grease or oily substances may require stronger cleaning compounds. Avoid solvents or abrasive cleaners. Avoid using strong detergents, ammonia, chemicals or other harsh cleaning substances on finished exterior surfaces. They can also cause severe damage to the wood.
- Never use power equipment, such as high-pressure washers or sandblasting machines, to clean windows or doors. This can damage your products, therefore voiding applicable warranties.
- Use specialty maintenance products recommended by Bosquet, according to the manufacturer's instructions.